

How to Install the Waterproof Cover

1. Prepare an Ethernet cable without **Ethernet Crystal Head**.



2. Make the cable pass through the waterproof cover.



3. Install the **Ethernet Crystal Head(Rj45)** via a crimping tool



4. Plug into the Network socket of Reolink PoE IP camera and close the waterproof cover.

